

ISA110

LIMITED EDITION

user's manual

Focusrite
audio engineering



ISA110

LIMITED EDITION

Serial No.

Signed:

.....
Phil Dudderidge, Director

.....
Simon Blackwood, Director

.....
Rob Jenkins, Head of Sound

Thank you for purchasing the ISA110 brought to you by the Focusrite team – Trevor, Peter, Martin, Helen, Mick, Phil, Chris, Micky, Pauline, Jo, Chris, Nathan, Rob, Peter, Simon and Giles.

The chaps at Focusrite are a jolly hard working bunch and take a great deal of pride in designing, building and delivering the best audio products around; we hope your new Focusrite unit lives up to that reputation, and that you enjoy many years of productive recording.

If you would like to tell us about your recording experiences then email us at: sales@focusrite.com

*To Trevor Phil. Nathan Simon Rob Chris Martin
Giles Helen Simon Phil Mick. Chris Jo Peter*

The FocusriteTeam

Contents

Important Safety Instructions	3
Power Connections	3
Signal Connections	4
Getting to Know the ISA110	4-5
Applications	6
Specifications	7
Warranty	7
Focusrite Distributors	8

Important Safety Instructions

Read all of these instructions and save them for future reference. Follow all warnings and instructions marked on the unit.

- Do not obstruct air vents in the rear panel. Do not insert objects through any apertures.
- Do not use a damaged or frayed power cord.
- Unplug the unit before cleaning. Clean with a damp cloth only. Do not spill liquid on the unit.
- Unplug the unit and refer servicing to qualified service personnel under the following conditions:

If the power cord or plug is damaged; if liquid has entered the unit; if the unit has been dropped or the case damaged; if the unit does not operate normally or exhibits a distinct change in performance. Adjust only those controls that are covered by the operating instructions.

- Do not defeat the safety purpose of the polarised or grounding-type plug. A polarised plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wider blade or the third prong are provided for your safety. When the plug provided does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

This unit is capable of operating over a range of mains voltages as marked on the rear panel. Ensure correct mains voltage setting and correct fuse before connecting mains supply. Do not change mains voltage settings while mains supply is connected.

To avoid the risk of fire, replace the mains fuse only with the correct value fuse, as marked on the rear panel.

The internal power supply unit contains no user serviceable parts. Refer all servicing to a qualified service engineer, through the appropriate Focusrite dealer.

Power Connections

There is an IEC mains lead supplied with the unit which should have the correct moulded plug for your country. The wiring colour code used is:

For units shipped to the USA, Canada, Taiwan and Japan:

Live - Black **Neutral** - White **Earth** - Green

For units shipped to any other country:


Live - Brown **Neutral** - Blue **Earth** - Green and Yellow

WARNING:

THIS UNIT MUST BE EARTHED BY THE POWERCORD

UNDER NO CIRCUMSTANCES SHOULD THE MAINS EARTH BE DISCONNECTED FROM THE MAINS LEAD.

Signal Connections



XLR (Audio) Inputs and Outputs

All 3-pin XLR audio connectors (Output, Mic/Line Inputs) are wired as follows:

- Pin 1 Screen/Chassis
- Pin 2 Audio 0°
- Pin 3 Audio 180°

Insert Send and Return

1/4" Jack wired as follows:

- Tip Audio 0°
- Ring Audio 180°
- Sleeve Screen/Chassis

Mic IP & Line IP

Either of these inputs may be used as the main input to the ISA110.

Insert Return

This is used as the insert input point after the Mic Pre and before EQ.

Insert Send

This is used as the insert output point after the Mic Pre and before EQ.

Output

This is a balanced output after the EQ.

Getting to Know the ISA110

On

Applies power to the unit. Turn on the ISA110 before powering up devices to which the outputs are connected.



O/L LED

This LED illuminates when the peak signal level reaches or exceeds +20dB, or when the peak signal level reaches 6dB below clipping. The signal is monitored after the EQ stage.

Occasional short-duration peaks which may cause the LED to blink will not normally cause audible distortion, but if the LED is lit constantly, the level in the appropriate section of the module should be reduced to prevent overloading.

Input Stage



Two input options are provided to give compatibility with Mic or Line sources.

Mic

Mic input sensitivity is switched from -60dB to 0dB in 6dB steps. Phantom power is available on the rear panel XLR for condenser mics when +48V front panel switch is pressed.

Line

A Line input is available on XLR, with a switched gain control giving a range of +/-18dB in 6dB steps.

Trim

The TRIM control provides additional variable gain of 0 to 10dB.

+48V

Provides +48V powering for condenser mics when pressed.

Phase

Pressing PHASE reverses the phase of the selected input, to correct phase problems with close microphones or incorrect wiring polarity. Phase is before the Insert Send output.

EQ Module

All EQ

Pressing ALL EQ activates all sections of the EQ module (except the Hi and Lo Pass Filters) and also the insert return, placing the whole module in the audio path. Toggling ALL EQ allows A/B comparison of flat/EQ'd settings and insert effects.



Filter In

Switch the control from the OFF position to make the Hi and Lo Pass Filters active in the audio path.

Both filters provide 18dB/octave rolloff.

Low Pass Filter

Rolloff frequency is switch selectable at 3k9Hz, 5k6Hz, 8k2Hz, 12kHz or 16kHz.

High Pass Filter

Rolloff frequency is switch selectable at 36Hz, 60Hz, 105Hz, 185Hz or 330Hz.

PARAMETRIC EQ

Two separate bands of parametric EQ are provided, each with continuously variable boost/cut with centre detent, sweep control with two ranges, and variable Q. The first band covers the range 40Hz to 400Hz (120Hz to 1k2Hz when x3 is pressed) and the second band covers 600Hz to 6kHz (1.8kHz to 18kHz when x3 is pressed).



Parametric EQ In

Press in to switch the Parametric EQ into the signal path. ALL EQ must also be on for the Parametric EQ to be active.

x3

The Sweep controls have two ranges, the higher being selected when the x3 switch is pressed (frequencies shown in yellow on the panel).

SHELVING EQ

High and Low frequency shelving sections are available, each with continuously variable boost/cut with centre detent, and a six position rotary switch for selection of rolloff frequency.




Shelving EQ In


Press in to switch all the Shelving EQ into the signal path. ALL EQ must also be on for the Shelving EQ to be active.

APPLICATIONS


Minimal Recording
(Mic pre recording only)

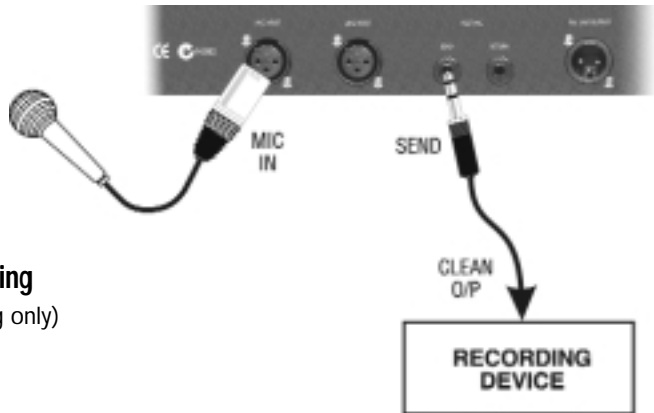

Record with EQ

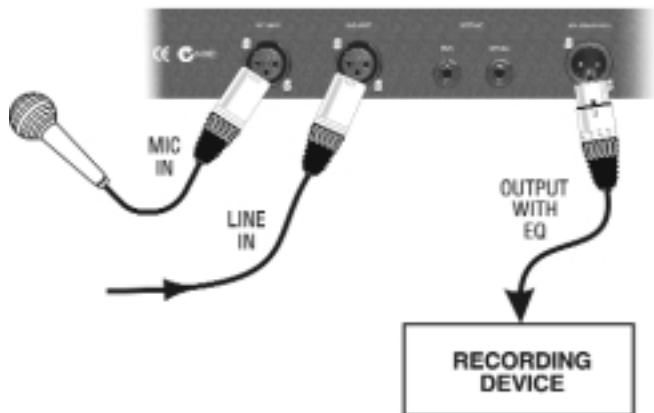

Record with Insert & EQ

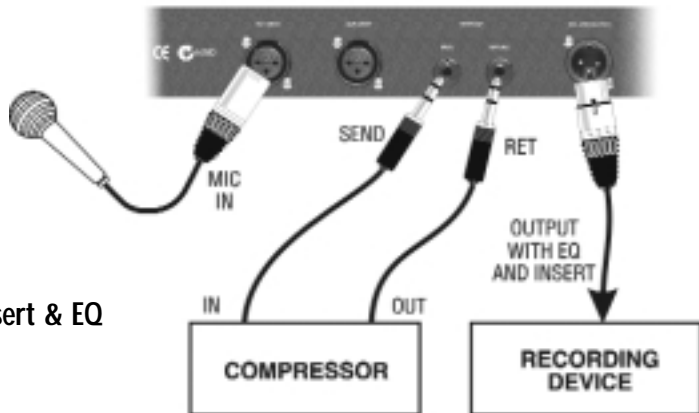

Specifications

Rear Panel Connectors

Insert Send

Connector:	TRS Jack
Signal:	Balanced
Operating Level:	+4dBu
Maximum O/P Level:	+20dBu

The connector is an output from the point in the signal path before the EQ.

Insert Return

Connector:	TRS Jack
Signal:	Balanced
Operating Level:	+4dBu
Maximum I/P Level:	+26dBu

The connector is the return or input to the signal path.

Line

Connector:	XLR
Signal:	Balanced (Transformer)
Operating Level:	+4dBu
Maximum I/P Level:	+26dBu
Gain Range:	+/-18dB in 6dB steps
Input Impedance:	10K Ω
Noise:	-96dBu
THD:	0.003% with 0dBu 1kHz input and 20Hz-22kHz bandpass filter

Mic

Connector:	XLR
Signal:	Balanced (Transformer)
Operating Level:	+4dBu
Maximum I/P Level:	+26dBu
Gain Range:	0 to +60dB in 6dB steps
Input Impedance:	1k2 Ω
Noise:	123dB EIN with 150 Ω input resistance at 60dB of gain
THD:	0.0008%

Output

Connector:	XLR
Signal:	Balanced (Transformer)
Operating Level:	+4dBu
Maximum O/P Level:	+26dBu

Signal is the transformer output stage.

Dimensions

Height	44mm (1.7")
Width	444.6mm(17.5") at rear 483mm (19") at front
Depth	309.7mm (12.2")

Accuracy:

Whilst every effort has been made to ensure the accuracy and content of this manual, Focusrite Audio Engineering Ltd makes no representations or warranties regarding the contents.

Copyright:

Copyright December 1999 Focusrite Audio Engineering Ltd. All rights reserved. No part of this manual may be reproduced, photocopied, stored on a retrieval system, transmitted or passed to a third party by any means or in any form without the express prior consent of Focusrite Audio Engineering Ltd.

Warranty:

All Focusrite products are covered by a warranty against manufacturing defects in material or craftsmanship for a period of one year from the date of purchase. Focusrite in the UK, or its authorised distributor worldwide will do its best to ensure that any fault is remedied as quickly as possible. This warranty is in addition to your statutory rights.

This warranty does not cover any of the following:

- Carriage to and from the dealer or factory for inspection or repair labour charge if repaired other than by the distributor in the country of purchase or Focusrite in the U.K.
- Consequential loss or damage, direct or indirect, of any kind, however caused
- Any damage or faults caused by abuse, negligence, improper operation, storage or maintenance

If a product is faulty, please first contact your dealer in the country of purchase; alternatively, contact the factory. If the product is to be shipped back, please ensure that it is packed correctly, preferably in the original packing materials. We will do our best to remedy the fault as quickly as possible.

Please help us to serve you better by completing and returning the Warranty Registration Card at the back of this manual. Thank you.

Focusrite Distributors

Argentina

Phone:
Fax:

Australia

Phone:
Fax:

Austria

Phone:
Fax:

Belgium

Phone:
Fax:

Brazil

Phone:
Fax:

Canada

Phone:
Fax:

Chile

Phone:
Fax:

Croatia, Slovenia, Bosnia, Macedonia and Serbia

Phone:
Fax:

Denmark

Phone:
Fax:

Egypt

Phone:
Fax:

Finland

Phone:
Fax:

France

Phone:
Fax:

Germany

Phone:
Fax:

Greece

Phone:
Fax:

Hong Kong/China

Phone:
Fax:

Hungary

Phone:
Fax:

Iceland

Phone:
Fax:

India

Phone:
Fax:

Indonesia

Phone:
Fax:

Ireland

Phone:
Fax:

Israel

Phone:
Fax:

Italy

Phone:
Fax:

Japan

Phone:
Fax:

DBA Systems SRL

00 54 1 545 6800
00 54 1 545 3668

Electric Factory Pty Ltd

00 61 3 9480 5988
00 61 3 9484 6708

TC Electronic Austria

0800 201 652
0800 201 653

EML

00 32 11 23 23 55
00 32 11 23 21 72

Proware

00 55 11 5585 2866
00 55 11 5584 6586

Digidesign Canada

00 1 650 842 7900
00 1 650 842 7999

Clio Musical Productora

00 56 2 274 9621
00 56 2 294 9575

Music Export

00 49 89 746 123 90
00 49 89 746 123 92

New Musik AG

00 45 86 190899
00 45 86 193199

Alpha Audio

00 202 245 6199
00 202 247 8969

Studiotec Ky

00 358 9 5123 5330
00 358 9 5123 5355

DM2J Audio Solution

00 33 1 48 63 04 43
00 33 1 48 63 02 01

TC Electronic Deutschland

00 49 40 531 08 399
00 49 40 531 08 398

Bon Studio S.A.

00 30 1 3809605-8
00 30 1 3827868

Digital Media Technology

00 852 2721 0343
00 852 2366 6883

Absolute

00 361 252 0196
00 361 341 0272

Exton

00 354 551 2555
00 354 562 6490

R & S Electronics

00 91 22 636 9147
00 91 22 636 9691

Paradi

00 6221 831 8388
00 6221 8370 3473

CTI - Control Techniques Ireland

00 353 1 454 5400
00 353 1 454 5400

Sontronics

00 972 3 570 5223
00 972 3 619 9297

Grisby Music Professional

00 39 0 71 7108471
00 39 0 71 7108477

All Access Inc

00 81 52 443 5537
00 81 52 443 7738

Korea

Phone:
Fax:

R. O. Maldives

Phone:
Fax:

Mexico

Phone:
Fax:

Netherlands

Phone:
Fax:

New Zealand

Phone:
Fax:

Norway

Phone:
Fax:

Poland

Phone:
Fax:

Portugal

Phone:
Fax:

Romania

Phone:
Fax:

Russia

Phone:
Fax:

Singapore/Malaysia

Phone:
Fax:

South Africa

Phone:
Fax:

Spain

Phone:
Fax:

Sri Lanka

Phone:
Fax:

Sweden

Phone:
Fax:

Switzerland

Phone:
Fax:

Taiwan

Phone:
Fax:

Thailand

Phone:
Fax:

Turkey

Phone:
Fax:

United Kingdom

Phone:
Fax:

USA

Phone:
Fax:

Venezuela

Phone:
Fax:

Vietnam

Phone:
Fax:

Best Logic Sound Co

00 82 2 515 7385
00 82 2 516 7385

Island Acoustics

00 960 32 0032
00 960 31 8624

Vari

00 525 604 6946
00 525 605 9656

Total Audio BV

00 31 20 4476447
00 31 20 4476464

Protel

00 64 4 801 9494
00 64 4 384 2112

Lydrommet

00 47 22 80 94 50
00 47 22 80 94 60

Hexagon

00 48 22 44 66 99
00 48 22 44 83 55

Caius Tecnologias

00 35122 208 6009
00 35122 208 5969

A.F. Marcotec (Bucharest)

00 40 1 337 1254
00 40 1 337 1254

AT Trade

00 7 095 956 1105
00 7 095 956 6882

Team 108 Technical Services

Private Ltd
00 65 748 9333
00 65 747 7273

Powerhouse Electronics

00 27 11 728 3102
00 27 11 728 6789

Media Sys S.L

00 34 93 426 6500
00 34 93 424 7337

HiFi Centre Ltd

00 94 1 580442
00 94 1 503174

Polysonic ab

00 46 31 7069050
00 46 31 7069110

Bleuel Electronic ag

00 41 1 751 7550
00 41 1 751 7500

DMT (Taiwan) Ltd

00 886 2 25164318
00 886 2 25159881

KEC

00 66 2 222 8613/4
00 66 2 225 3173

Imaj Music Yapim VE

Organizasyon Ticaret A.s
00 90 212 216 7180
00 90 212 216 7189

Focusrite Audio Engineering Ltd

+44 (0) 1494 462246
+44 (0) 1494 459920

Digidesign (San Francisco)

00 1 650 842 7900
00 1 650 842 7999

C&M Audio

00 58 2 263 8790/264 2050/
266 0466

00 58 2 267 4319

Vistar

00 84 4 824 3058
00 84 4 825 0099



Focusrite

audio engineering

Focusrite Audio Engineering Ltd, Lincoln Road,
High Wycombe, Bucks HP12 3FX England
Tel: +44 (0)1494 462246 FAX: +44 (0)1494 459920
e-mail: sales@focusrite.com www.focusrite.com